Rebooting an RDTg Clock

To perform these steps, it is necessary to be present in front of the physical clock you wish to reboot.

1. From the ID Entry screen, tap “Hide”.

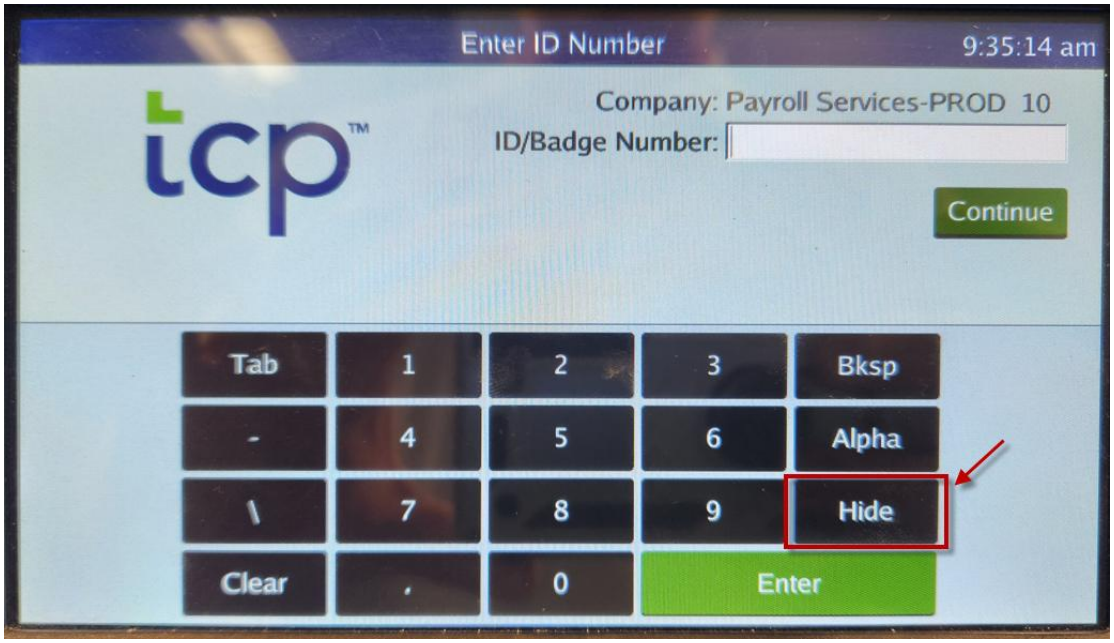

2. Then, tap on the gear icon.

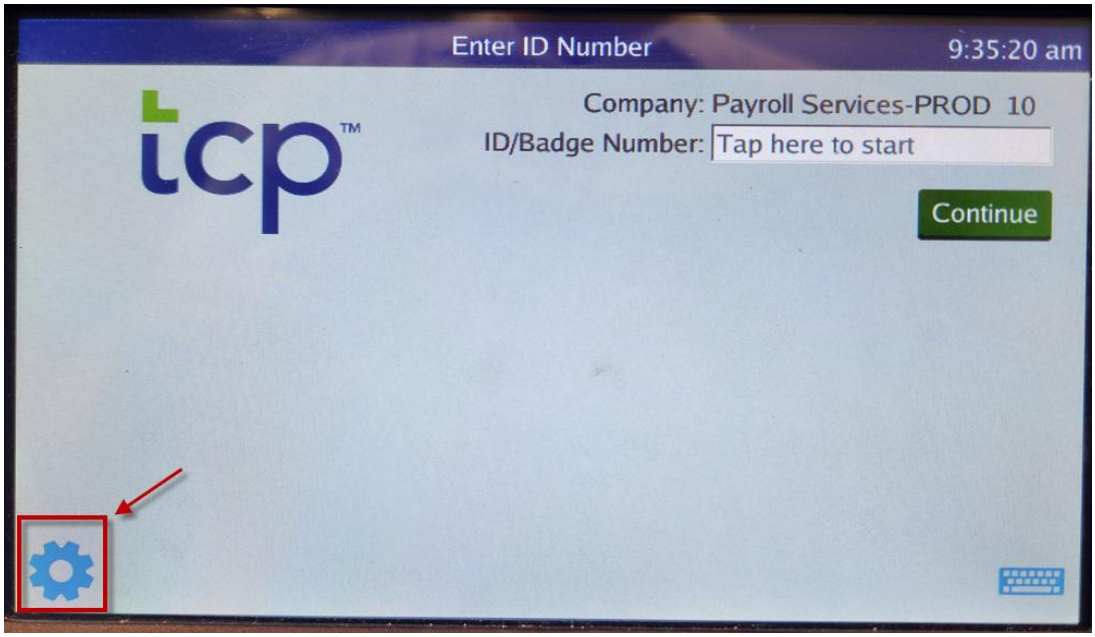

3. From the company selection screen, tap “Device”

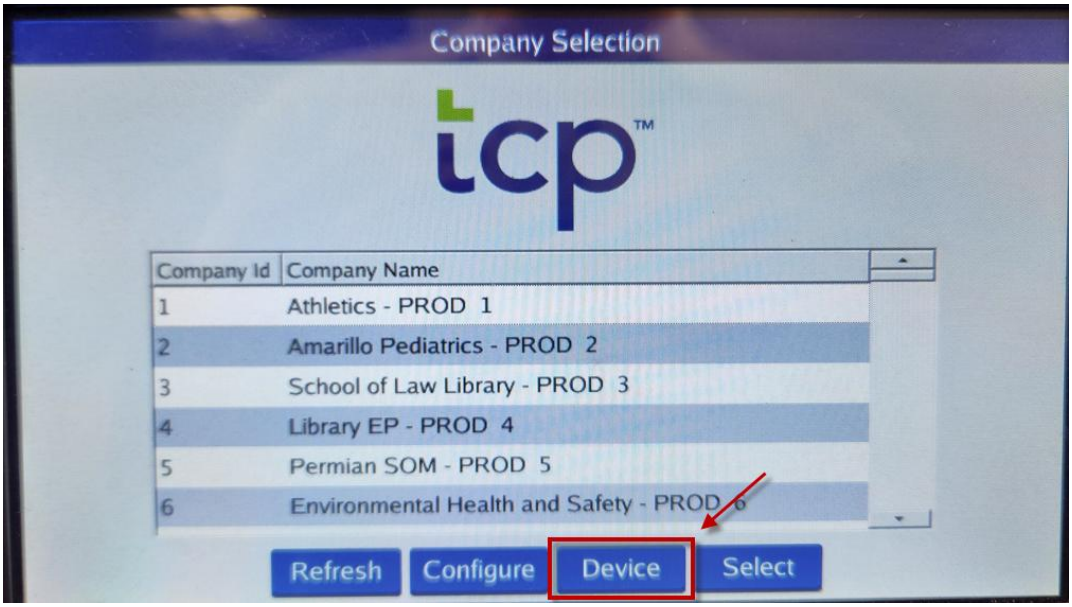

4. Then tap “Restart Terminal”

